

# AIR ROLLER SEAT

## SAFETY WARNINGS AND PRECAUTIONS

**⚠ Warning: When using this product, basic safety precautions should always be followed to reduce the risk of personal injury and damage to equipment.**

### **Read all instructions before using this product!**

1. **Keep work area clean.** Cluttered areas invite injuries.
2. **Observe work area conditions.** Don't expose to rain. Keep work area well lighted.
3. **Keep children away from work area.** Children must never be allowed in the work area. Do not let them handle, ride on, or be in close proximity of the seat.
4. **Use the right tool for the job.** There are certain applications for which this product was designed. Do not modify this product and do not use this product for a purpose for which it was not intended.
5. **Use eye protection.** Always wear ANSI approved impact safety goggles.
6. **Maintain products with care.** Inspect parts periodically and, if damaged, have them repaired by an authorized technician.
7. **Replacement parts and accessories.** When servicing, use only identical replacement parts. Use of any other parts will void the warranty. Only use accessories intended for use with this stool.

**⚠ Warning: The warnings, cautions, and instructions discussed in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood by the operator that common sense and caution are factors which cannot be built into this product, but must be supplied by the operator.**

## OPERATION/MAINTENANCE

**To lower seat, sit on the Stool and pull up on the handle(7) until you have lowered the seat to the desired height.**

**To raise seat, stand next to the Stool and pull up on the handle(7). Release handle when seat has risen to the desired height.**

- ⚠ Do not let children play on or around the Roller Seat.**
- ⚠ Do not stand on Roller Seat or use the tool tray to carry large amounts of weight.**
- ⚠ Do not attempt to exceed the Roller Seat's 335 lb capacity.**
- ⚠ Once assembled, do not attempt to take this product apart.**
- ⚠ Do not expose to heat. Parts of this product are under pressure.**
- ⚠ WARNING: FAILURE TO FOLLOW THESE INSTRUCTIONS COULD RESULT IN LOSS OF LOAD AND/OR PERSONAL INJURY OR DAMAGE TO PROPERTY.**

# ASSEMBLY

1. Insert top of Lifting Pole (4) into the Hub (3) that has already been attached to the Seat Cushion (1).
2. Now insert Seat Cushion and Lifting Pole assembly into the socket of the Tool Tray (5).
3. Check and tighten all fasteners as needed.

## PARTS DIAGRAM AND PARTS LIST

Ref No	Description	QTY
1	Seat Cushion	1
2	Supporting Plate	1
3	Hub	1
4	Lifting Pole	1
5	Tool Tray	1
6	2½" Swivel Caster	5
7	Handle	1
8	Bolt M6x20	4
9	Cap Nut	5
10	Lock Washer Ø 8	5
11	Rivet Ø 3x16	1

